

Quick Guide to Using Panasonic NDI® cameras with Zoom Rooms

Supported Cameras

Panasonic AW-UE80K/AW-UE80W

Setup Instructions

PTZ Camera Configuration

1. Access the Panasonic PTZ camera through a web browser
2. Navigate to **Setup > Image/Audio > Video over IP > Streaming mode**, and select **High bandwidth NDI**.
3. Go to **Setup > Image/Audio > Video over IP > High bandwidth NDI** and set **Multicast Transmit** to **OFF**.
4. Confirm the **Source name** under **High bandwidth NDI**.

Zoom Web Portal Configuration

1. Sign in to the Zoom Web Portal.
2. Navigate to **Room Management > Zoom Rooms > Account Setting** and enable the following options:
 - ✓ **Allow Network Device interface (NDI®) usage**
 - ✓ **Allow NDI® inputs**If necessary, adjust resolution, frame rate, and other parameters to match the PTZ camera configuration.
3. Go to **Room Management > Zoom Rooms** and click **+Add Rooms** to create a room for NDI®.
4. Click **Edit** for the newly created room and set your preferred Room Passcode.

Zoom Rooms Controller

1. Open the Zoom Rooms Controller on your PC or tablet and sign in.
2. Select your room and start a **New Meeting**.

3. From **Switch Camera**, select the **Network video device** and choose the **High bandwidth NDI** of “**Source name**”.

Zoom Rooms

1. Open Zoom Rooms on your PC or tablet and sign in to your account.
2. Select your room.

Completion

The NDI® video stream from the Panasonic PTZ camera will now appear in your Zoom meeting.

*In the camera menu, “NDI High Bandwidth” is labeled as “High bandwidth NDI.”

*Zoom and the Zoom logo are trademarks of Zoom Video Communications, Inc., registered in the US and other countries.

*NDI® is a video connectivity technology and is registered as a trademark by Vizrt NDI AB in the United States and other countries.