


System Configuration Example

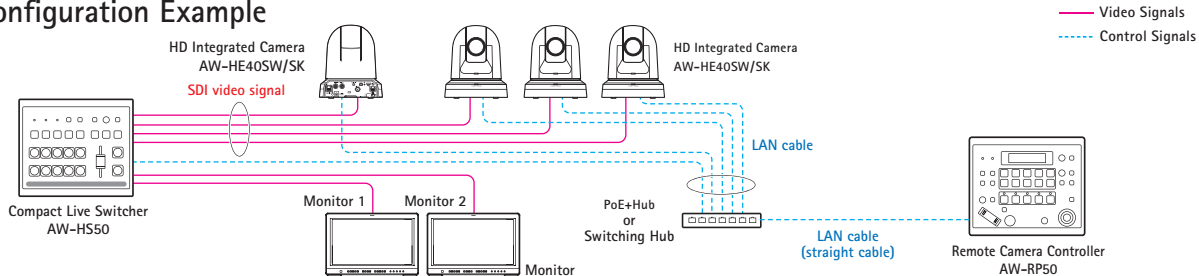

*The AC adaptor provided with the unit is not shown in the above figure. *SDI output supported only by AW-HE40SW/SK.

*The camera unit automatically recognizes straight cables and cross cables connected to the LAN terminal.