

# How to check the version of your product

---

Use the following procedure to check the version of your product, and refer to the corresponding Operating Instructions (PDF).

## ■ AW-UE150P/E/MC

Select the [Top Menu] → [Maintenance] → [Firmware Version].

For the operation, refer to “Operating Instructions”

## ■ AW-RP150G/MC

Select the [MAINTENANCE] button → [RP VERSION] → [SYSTEM VERSION].

For the operation, refer to “Operating Instructions”