

# Guide for AG-CX350 Ver3.0 clip import - from SD,P2 card on - (Win) EDIUS Workgroup 9 Ver. 9.51


The screenshot shows the EDIUS software interface. The Source Browser on the left displays a tree view of folders. A yellow box highlights the 'P2' folder under 'Removable Media'. A yellow arrow points from this folder to the 'P2' folder in the Folder view on the right. The Folder view shows a detailed view of the 'P2' folder, including subfolders like 'F:[A050]', 'G:[CAA0008853]', 'RED', 'Removable Media', 'F:[A050]', 'AVCHD', and 'Video'.

**<Import P2>**  
 ① Select [P2]¥[drive name] on Source Browser to display thumbnail.

**<Import AVCHD>**  
 ① Select [Removable Media]¥[drive name] ¥[AVCHD] on Source Browser to display thumbnail.

**<Import MOV>**  
 ① Select [Removable Media]¥[drive name] ¥[Video] on Source Browser to display thumbnail.

# Guide for AG-CX350 Ver3.0 clip import - from SD,P2 card on - (Win) EDIUS Workgroup 9 Ver. 9.51

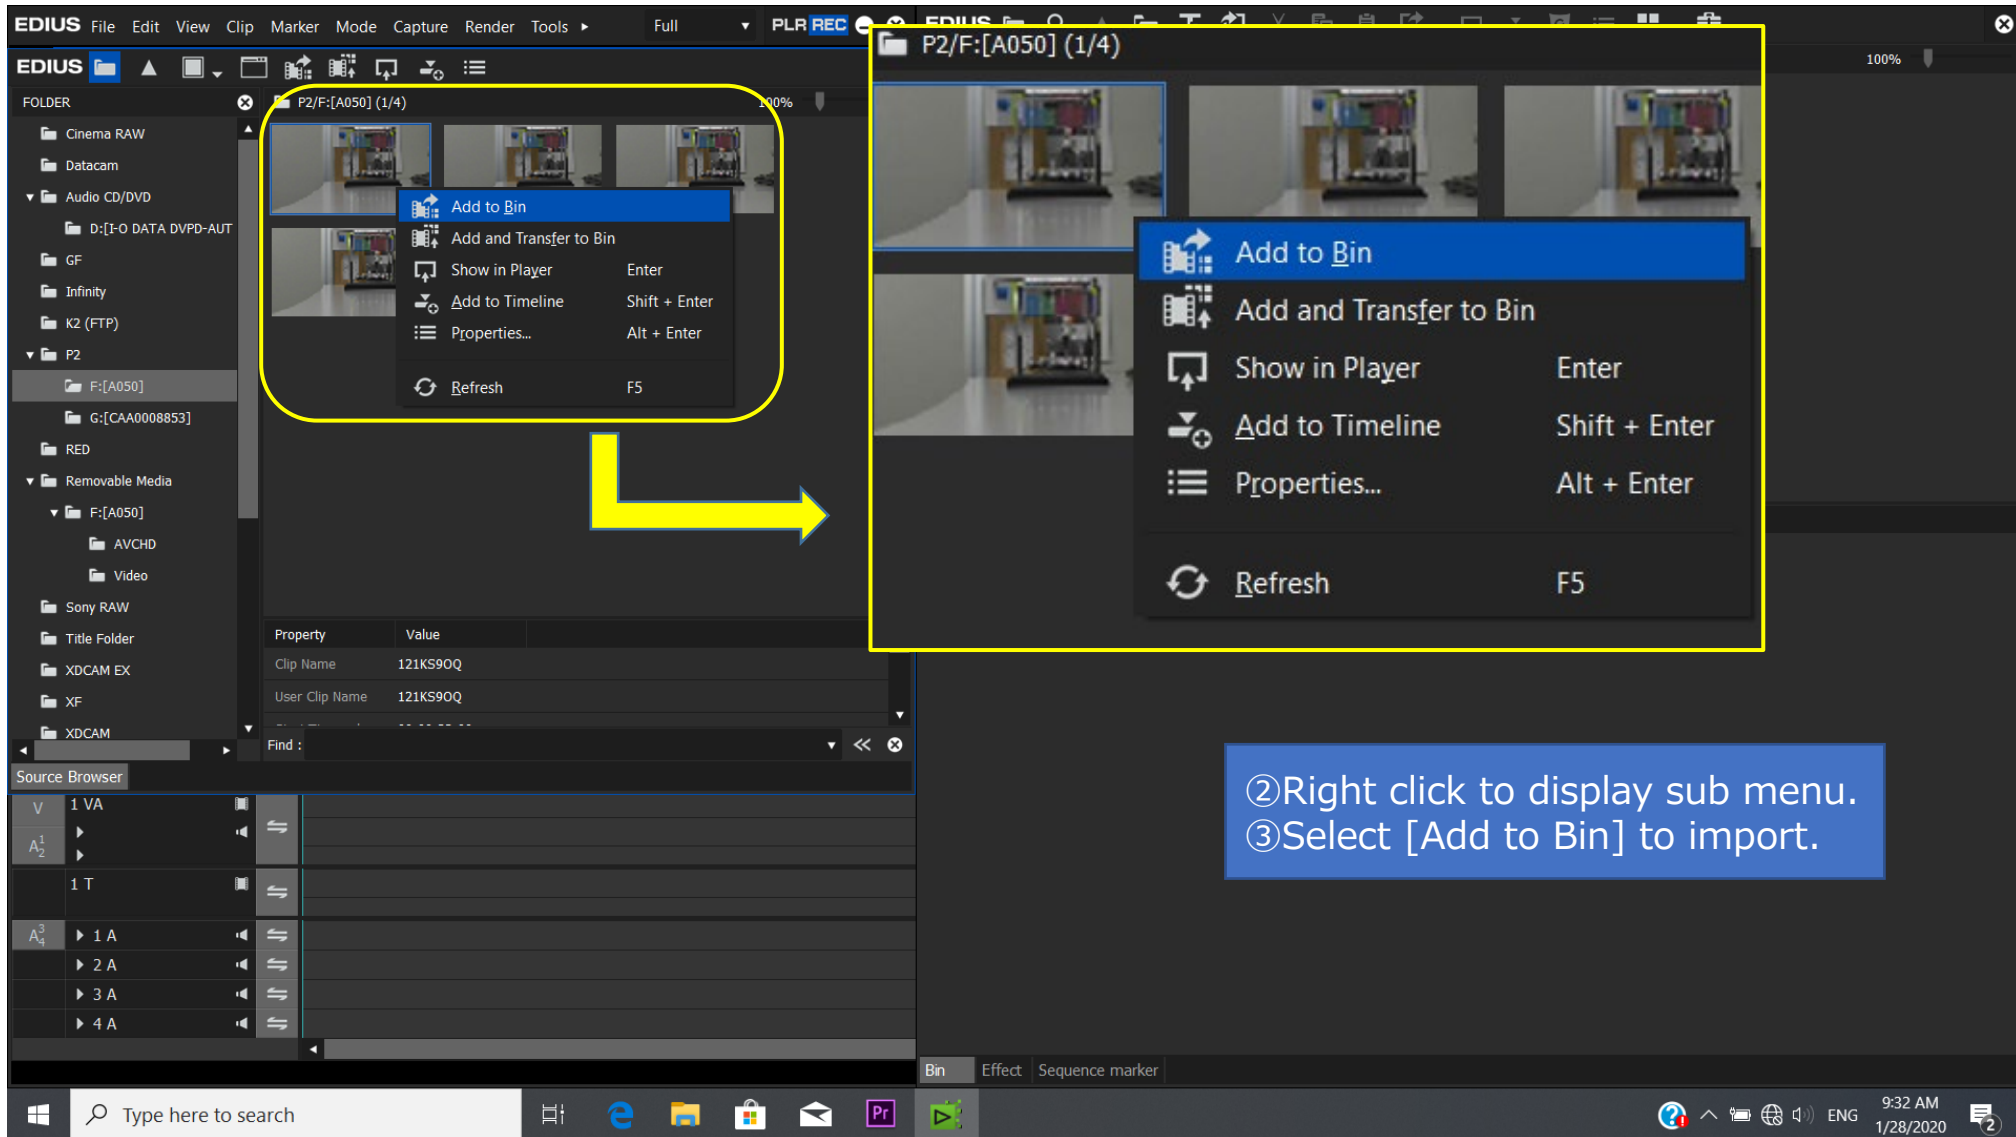

The screenshot shows the EDIUS software interface with a yellow box highlighting the 'Add to Bin' option in the context menu. A yellow arrow points from the context menu to the 'Add to Bin' option in the sub-menu. A blue box contains instructions: '2) Right click to display sub menu. 3) Select [Add to Bin] to import.'

②Right click to display sub menu.  
③Select [Add to Bin] to import.

# Guide for AG-CX350 Ver3.0 clip import - from SD,P2 card on - (Win) EDIUS Workgroup 9 Ver. 9.51

The screenshot shows the EDIUS interface with the Source Browser on the left displaying a folder structure for a P2 card. The main preview window shows three video clips selected in a bin. A context menu is open over these clips, with the 'Set as Sequence' option highlighted. A light blue text box in the center provides a recommended procedure for importing spanned clips.

**読み込み** (Load) → **Clipを選択し右クリック** (Select clip and right-click)

**Set as Sequence**

**Recommended procedure to import spanned clips -**

- ① Display thumbnails in a bin from Source Browser.
- ② Sequence clips in playback order.
- ③ Select all the necessary clips and right-click to display sub menu.
- ④ Select [Set as Sequence].
- ⑤ Clips are consolidated as one clip.